

Nežni električni skiro

Mini električni skiro

NAVODILA ZA UPORABO

 


Pozor: Pred uporabo skiroja natančno preberite navodila za uporabo. Začetnik mora biti v spremstvu staršev ali drugih odraslih, da vadi uporabo skiroja na odprtih prostorih. Uporabnik lahko samostojno uporablja skiro šele, ko obvlada tehniko vožnje skiroja.

Vsebina:


	Page
1. Sestavni deli skiroja	01
2. Montaža in nastavitev	02
3. Uvod v garancijo vožnje	04
4. Varnostna navodila	05
5. Baterija in polnilec	06
6. Obseg garancije	07
7. Vsebina škatle	08
8. Tehnične specifikacije	08
9. Kontakt	09

1. Sestavni deli skiroja

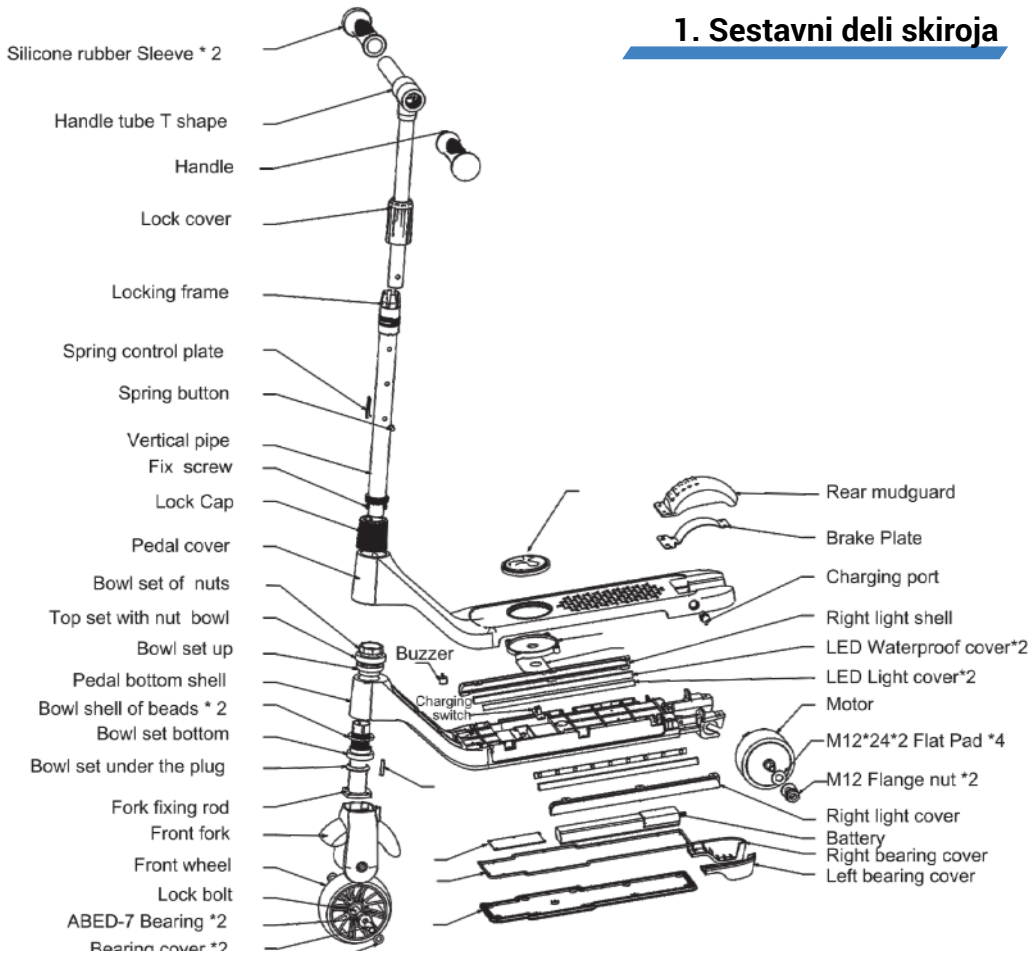


2. Montaža in nastavitve

 
01. Scooter installation

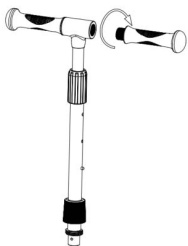

 
Tighten the handle in the direction of the arrow.

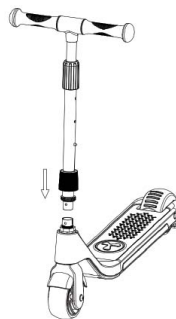

 Attach the vertical rod to the bottom plate and align it with the screw hole.

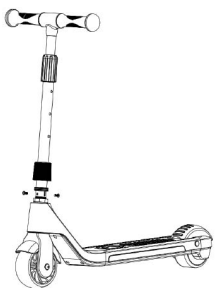


Use a screwdriver to tighten the screw.

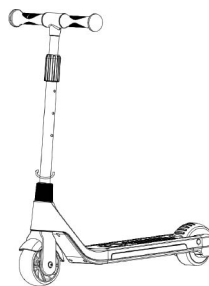 


Tighten the cover in the direction of the arrow.

 
02. Scooter adjustment

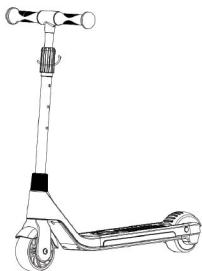

 UNSCREW the cover in the direction of the arrow.

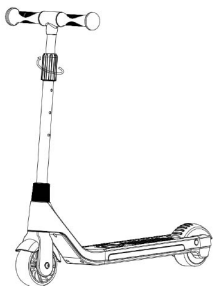

 After adjusting the height, secure the handlebar lock cover.

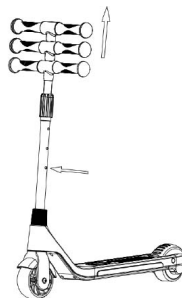

Press the height adjustment knob and then pull the handle up or down to adjust the height. Set the new height level by fixing the adjustment knob in one of the circular holes found in the handlebar axis.

3. Uvod v garancijo vožnje

Način zagona: Z obema rokama primite krmilo in skuter rahlo potisnite naprej ko zaslišite zvočni signal, to pomeni da je trenutna hitrost 4km/h. Ko brenčalo odda dva piska to pomeni, da je trenutna hitrost 6km/h ko odda tri zvočne signale, to pomeni da je trenutna hitrost 8km/h.

Changing the gears: After pushing the scooter, press the accelerator pedal 5 times to change gears. When the speed setting is successful: when the current speed is 4 km / h, the buzzer will ring once; at 6 km / h, it will ring twice and at 8 km / h it will ring 3 times.

Automatic stop: the scooter will stop automatically after 15 seconds of inactivity. If you need to turn it on, push it forward again.

Lights: After starting the motor, the lights will change from blue to seven colors; then they will go out and turn on again when the accelerator pedal is pressed. When the scooter is turned on, press, and release the pedal to accelerate and the buzzer will beep. The lack of an audible signal indicates that the scooter is not turned on.

Driving operation: To drive the scooter, keep both hands on the handlebars, put one foot on the accelerator pedal and use the other foot to push the scooter. When the speed reaches approximately 3 km / h, it will start to slowly increase the speed until it reaches the maximum set speed.

Braking operation:

1. Please use one foot to press the rear wheel guard, thus activating the mechanical brake on the rear wheel.
2. Take your foot off the accelerator pedal to complete the braking operation.

Low battery indication: If the scooter emits 3 beeps continuously, it means that the battery is discharged. Please charge the scooter when you hear the low battery indication.

4. Safety instructions

1. This product is a mini electric-assisted scooter for children. It is designed to be used by one child at a time. It must not be used by adults or by two people at the same time. Children must be accompanied by parents or adults when using the scooter.
2. When driving the scooter, please wear a safety helmet and other protective equipment (kneepads, armrests, etc.).
3. Do not drive the scooter in places where it is unsafe or illegal, such as car lanes.
4. Please practice in an open place first and master the driving operation before driving the scooter in a public space.
5. Do not make dangerous movements while riding the scooter and don't attempt to ride with one hand. Keep your feet on the scooter platform when riding the scooter.
6. Do not try to ride the scooter over bumps or steps of 3 cm or more, as you may overturn the scooter. Overturning the scooter can injure the user and / or damage the scooter. For the user's safety it is recommended to also avoid steps below 3 cm if possible.
7. When you encounter rough or uneven road conditions, please slow down the scooter or get off it.
8. Users must adjust the height of the scooter to the correct position to ensure safe riding.
9. Do not drive this scooter on slippery surfaces or surfaces covered with oil or ice.
10. Do not use this scooter in temperatures below -5 degrees Celsius.
11. Do not use this scooter on surfaces with an inclination higher than 5 degrees. For use on surfaces with an inclination higher than 5 degrees, you need to assist the scooter to ride uphill.
12. Do not immerse the scooter in water deeper than 5 cm to avoid damaging the vehicle's electrical components.
13. In bad weather, such as rain, snow, and wind, please avoid riding the scooter as much as possible to avoid unnecessary damage caused by external factors.
14. If the scooter is fully charged and will not be used for a longer period, it must still be charged at least once a month. Even if the scooter is also used when its battery is discharged, it must still be charged once every 7 days for battery maintenance.

5. Battery and charger

01. Lithium battery

This scooter contains a Li-Ion battery. When you receive the scooter for the first time, please fully charge the battery before using it.

1. Please charge immediately after the scooter emits a warning tone to avoid battery damage and to extend the battery's life.
2. When the scooter is not used for a long time, please charge it at least once a month (even if the battery is fully charged).
3. If the battery is not used for a long time, the battery level is lower than the battery protection status and cannot be used. Please contact your local distributor quickly.

Note: If the battery is damaged due to water, collision and other abnormal factors, the damage will not be covered by the warranty.

02. Charger

The dedicated charger supplied with the scooter has a charging protection function. When the battery is 100% fully charged, the charger automatically shuts off. Damage caused by other abnormal factors, such as water ingress, collision, etc., is not covered by the warranty.

Charging instructions

1. Open the rubber part of the charging port on the platform and insert the output connector of the charger in the charging port.
2. Plug the charger into an outlet (AC100V-240V)
3. When the charger indicator is red, it indicates that it is charging; when the charger indicator turns green, it indicates that the battery is fully charged.
4. Please charge the battery in a dry and ventilated environment.

6. The scope of the warranty

If your scooter doesn't work properly under normal conditions of use and if the scooter is under warranty, please contact the company or product distributor to receive adequate after-sales service.

The warranty is granted according to the warranty certificate that is received along with the scooter. (Solving warranty issues is a free, maintenance-free service.)

Note: Please use our products correctly.
Damage to parts caused by abnormal use is not covered by the warranty.

During the warranty period, if the following reasons cause damages, they will not fall within the scope of the warranty:

1. The scooter is not properly maintained and repaired according to this manual.
2. The scooter is used for dangerous activities, such as stunts, etc., which can lead to damage or malfunctions.
3. The scooter shows signs of disassembly or use of non-original parts.
4. The body of the scooter and other parts are damaged by mistakes, traffic accidents, or accidental collisions.
5. The scooter shows signs of contact with water or unsuitable parts.
6. Damage or malfunction caused by driving on an abnormal road.
7. Commercial rental or improper use.
8. Damage caused by natural disasters.
9. Exposure of the scooter to sun or rain for a long time, thus causing rapid damage to the scooter.

7. Box content

Content	Quantity
Mini electric-assisted scooter	1
Charger	1
User manual	1
Hex key	1

Note: The actual performance of the shipped product and its technical specifications are subject to change without notice.

8. Technical specifications

Color	Black/blue
Speed	4-8 km/h 4-8 KM/H (when the speed reaches 4-8 KM/H, it will continue to run at a constant speed)
Climbing ability	5 degrees
Battery	21,6 V, 2.5 AH
Motor	8.63 cm, 60W
Maximum load	50 KG
Range	5-10 KM
Size	70*34*74/80/86 cm
Platform distance from the ground	8 cm
Ground clearance	4.5 cm
Net weight/ Gross weight	4.2/5.5 KG

9. Contact

Contact us if you have problems with the driving, maintenance, and safety of the scooter or if it presents any defects.

Please have your order number at hand when contacting us.

Thank you for choosing the Gentle Electric Scooter

We hope you enjoy using this scooter.



The manufacturer reserves the right to modify the product and update this manual at any time.

For support or for receiving the manual in an electronic format don't hesitate to contact us at: **service@e-twow.com**.